 


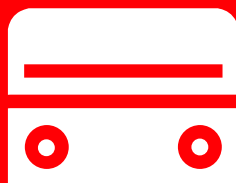

**STEP UP TO THE PLATE**



**CHICKEN ROTISSERIE - ELECTRIC**

ROT001 | ROT002

# CONTENTS

I.	PRESENTATION OF APPLIANCE .....	3
2.	MOUNTING AND CONNECTION.....	4
3.	RULES OF OPERATION .....	4
4.	PROTECTING THE APPLIANCE AGAINST DAMAGE.....	5
5.	IN CASE OF TROUBLE .....	5
6.	TRANSPORTATION AND STORAGE .....	6
7.	FIRST CLEANING AND FIRST HEATING .....	6
8.	SWITCHING ON/OFF .....	7
9.	OPERATION .....	7
10.	CLEANING AND MAINTENANCE .....	8
II.	TROUBLESHOOTING .....	8
12.	ELECTRICAL CONNECTION.....	9
13.	TECHNICAL SPECIFICATIONS.....	9
14.	WARNING SIGNS .....	9
15.	ELECTRICAL CIRCUIT DIAGRAM.....	10
16.	WARRANTY .....	II

# I. PRESENTATION OF APPLIANCE

ROTO01 2 SPIT COMMERCIAL CHICKEN ROTISSERIE OVEN 8-10 CHICKENS – ELECTRIC  
ROTO02 3 SPIT COMMERCIAL CHICKEN ROTISSERIE OVEN 12-15 CHICKENS – ELECTRIC



- 1 HINGE
- 2 GLASS DOOR
- 3 HANDLE
- 4 KNOB
- 5 TRAY
- 6 STOPPER
- 7 SKEWER
- 8 ON/OFF KNOB

MODEL	CAPACITY	WIDTH	DEPTH	HEIGHT
ROTO01	8-10 BIRDS	1150 MM	472 MM	605 MM
ROTO02	12-15 BIRDS	1150 MM	472 MM	793 MM

## WORKING PRINCIPLE OF THE APPLIANCE:

FOR HEATING, ELECTRICITY IS USED TO POWER THE APPLIANCE. ROTATING PROCESS OF SKEWERS ARE MADE BY A MOTOR.

## **2. MOUNTING AND CONNECTION**



- **MAKE ELECTRIC CONNECTION OF YOUR EQUIPMENT IN COMPLIANCE WITH EN 60335-1 AND EN 60335-2-38.**
- **GROUND YOUR EQUIPMENT IN COMPLIANCE WITH EN 60335-1 STANDARDS AND ENSURE MAINTENANCE OF THE GROUNDING.**
- **ELECTRIC SAFETY OF THE EQUIPMENT MAY BE ENSURED ONLY BY MEANS OF PROTECTED CABLE SYSTEM IN ACCORDANCE WITH THE RULES. IT IS VERY IMPORTANT TO PERFORM THIS ESSENTIAL SAFETY MEASURE. IF YOU ARE SUSPICIOUS, YOU HAVE THE INSTALLATION CONTROLLED BY A PROFESSIONAL ELECTRICIAN. RG DISTRIBUTORS LTD T/A ECATERING IS NOT RESPONSIBLE FOR ANY DAMAGES THAT MAY ARISE FROM A MISSING OR BROKEN FUSE CABLE.**
- **WHEN PERFORMING ELECTRIC CONNECTION OF THE EQUIPMENT, NEVER USE AN EXTENSION CABLE. EQUIPMENT SAFETY CANNOT BE REALIZED WITH EXTENSION CABLE.**
- **DO NOT USE YOUR EQUIPMENT IN MULTI-PLUG SOCKET MEDIA. BEFORE INSTALLATION OF YOUR EQUIPMENT, MAKE SURE THAT THERE IS NO VISIBLE DAMAGE. DO NOT INSTALL OR USE ANY DAMAGED EQUIPMENT.**
- **BEFORE CONNECTION OF YOUR EQUIPMENT, MAKE SURE THAT THE DATA ON THE MANUFACTURER'S PLATE COMPLY WITH THE SPECIFICATIONS OF MAINS (INSURANCE, VOLTAGE AND FREQUENCY) YOU USE. IF YOU'RE UNSURE, PLEASE CONSULT A QUALIFIED ELECTRICIAN.**
- **IF THE MAIN CORD IS DAMAGED, IT MUST BE REPLACED BY RG DISTRIBUTORS LTD; A SERVICE CENTER AUTHORISED BY RG DISTRIBUTORS LTD OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.**
- **DEFECTIVE PARTS MAY ONLY BE REPLACED BY ORIGINAL RG DISTRIBUTORS LTD SPARE PARTS. WE AS MANUFACTURER MAY ONLY ASSURE THAT YOU SHALL OPERATE YOUR EQUIPMENT WITH THESE PARTS COMPLETELY IN SAFE.**
- **RG DISTRIBUTORS LTD T/A ECATERING IS NOT RESPONSIBLE FOR ANY DAMAGES THAT MAYBE CAUSED BY IMPROPER MOUNTING OR CONNECTION OF THE EQUIPMENT.**

## **3. RULES OF OPERATION**

- **PLEASE READ CAREFULLY THE USER MANUAL BEFORE FIRST OPERATION. THUS YOU SHALL BOTH PROTECT YOURSELF AND PREVENT THE EQUIPMENT FROM BEING DAMAGED.**
- **USE THE EQUIPMENT ONLY IN MOUNTED STATE. THUS YOU WILL AVOID OF CONTACT WITH ELECTRIC-CONDUCTING PARTS OF THE EQUIPMENT.**
- **USE THE EQUIPMENT ONLY ON A FLAT SURFACE.**
- **USE THE APPLIANCE ONLY FOR GRILLING CHICKEN. RG DISTRIBUTORS LTD T/A ECATERING IS NOT RESPONSIBLE FOR ANY DEFECT OR DAMAGE ARISING FROM USE OF THE EQUIPMENT FOR ANY OTHER PURPOSE. DEFECTIVE PARTS MAY ONLY BE**
- **DEFECTIVE PARTS MAY ONLY BE REPLACED BY ORIGINAL RG DISTRIBUTORS LTD SPARE PARTS. WE AS MANUFACTURER MAY ONLY ASSURE YOU THAT YOU SHALL OPERATE YOUR APPLIANCE WITH THESE PARTS COMPLETELY IN SAFE.**
- **RG DISTRIBUTORS LTD T/A ECATERING IS NOT RESPONSIBLE FOR ANY DAMAGES THAT MAY BE CAUSED BY IMPROPER MOUNTING OR CONNECTION OF THE APPLIANCE.**



- PLEASE READ CAREFULLY THE OPERATION MANUAL BEFORE FIRST OPERATION. THUS YOU SHALL BOTH PROTECT YOURSELF AND PREVENT THE APPLIANCE FROM BEING DAMAGED.
- USE THE APPLIANCE ONLY IN MOUNTED STATE. THUS YOU WILL AVOID OF CONTACT WITH ELECTRIC-CONDUCTING PARTS OF THE APPLIANCE.
- USE THE APPLIANCE ONLY UNDER A HOOD AND ON A FLAT SURFACE. THE DISTANCE BETWEEN THE HOOD AND APPLIANCE MUST COMPLY WITH THE VALID LOCAL FIRE AND SAFETY REGULATIONS IN ORDER TO GET SUFFICIENT AIR VENTILATION.
- PLEASE BEAR IN MIND THAT IF SOME OTHER APPLIANCES USED AT THE SAME TIME AT THE SAME PLACE TOGETHER WITH THIS APPLIANCE, NEGATIVE EFFECTS SUCH AS HEAT, FAT, VAPOUR ETC. CAUSED BY OTHER APPLIANCES MAY RESULT IN BREAKING WARRANTY OF THE APPLIANCE.
- USE THE APPLIANCE ONLY FOR GRILLING CHICKEN. THE APPLIANCE MUST BE USED BY ONLY TRAINED PERSONNEL WHO ALREADY READ THESE INSTALLATION-OPERATING-MAINTENANCE INSTRUCTIONS RESPECTIVELY. RG DISTRIBUTORS LTD T/A ECATERING IS NOT RESPONSIBLE FOR ANY DEFECT OR DAMAGE ARISING FROM USE OF THE APPLIANCE FOR ANY OTHER PURPOSE.

 
## 4. PROTECTING THE APPLIANCE AGAINST DAMAGE



- WHILE INSTALLING THE APPLIANCE, PROTECT HEATER MECHANISM ON-OFF KEY FROM ANY POSSIBLE STROKES.
- CAUTION: SINCE SKEWER ARE HOT, THERE IS A RISK OF BURNING! CLEAN THIS AREA WHEN THEY ARE COOL.
- PREVENT ANY METAL AND SIMILAR PARTS ENTERING INTO THE VENTILATING OPENINGS ON THE APPLIANCE BODY AS THEY MAY GIVE DAMAGE TO THE FITTINGS AND ELECTRIC PARTS.
- NEVER USE PRESSURE WATER AND STEAM CLEANING TOOLS. SUCH CLEANING MATERIALS MAY DAMAGE THE APPLIANCE.

## 5. IN CASE OF TROUBLE

- IN CASE OF ANY TROUBLE WITH YOUR EQUIPMENT, SWITCH OFF YOUR EQUIPMENT AND FUSE, DISCONNECT THE POWER CABLE FROM THE MAINS SOCKET AND CALL CUSTOMER SERVICES. MAKE SURE THAT ELECTRIC CONNECTION IS NOT MADE TILL COMPLETION OF THE REPAIR PROCESS.
- ALL REPAIR OPERATIONS SHOULD BE PERFORMED BY AUTHORIZED SERVICE CENTER. ANY REPAIRS TO BE PERFORMED BY PERSONS OTHER THAN AUTHORIZED SERVICE CENTERS MAY CAUSE PERSONAL INJURY AND EQUIPMENT DAMAGE. REPAIRS SHOULD BE PERFORMED BY AUTHORIZED SERVICE CENTER DURING WARRANTY PERIOD. OTHERWISE, REPAIR OF TROUBLES THAT MAY SUBSEQUENTLY OCCUR SHALL NOT BE COVERED BY THE WARRANTY.

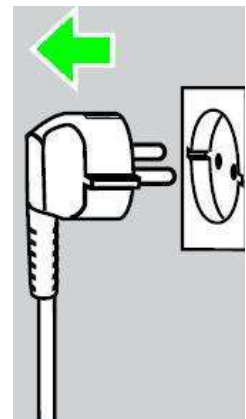

## BEFORE FIRST OPERATION:

### PRELIMINARY INFORMATION

- KEEP USER MANUAL SAFE.
- CONTROL THE EQUIPMENT BEFORE INSTALLATION FOR ANY VISIBLE DAMAGES. DO NOT INSTALL OR USE ANY DAMAGED EQUIPMENT.

### PACKAGING

- PACKAGING PROTECTS THE EQUIPMENT AGAINST POSSIBLE DAMAGES DURING TRANSPORTATION. THIS PACKAGING HAS BEEN MADE OF RECYCLED MATERIAL. THAT THE PACKAGING MATERIAL IS MADE OF RECYCLED MATERIAL BOTH ENSURES SAVING ON RAW MATERIAL AND REDUCES QUANTITY OF WASTE. IF YOU WANT TO DISPOSE THE PACKAGING MATERIAL YOURSELF, PLEASE CALL THE NEAREST RECYCLING CENTER.

## 6. TRANSPORTATION AND STORAGE



- IF YOU NEED TO TRANSPORT THE APPLIANCE, THEN MOVE IT IN ITS ORIGINAL CONTAINER AND COMPLY WITH THE MOVEMENT MARKS ON THE CONTAINER.
- IF THE ORIGINAL CONTAINER OF THE APPLIANCE IS NOT AVAILABLE, FIX THE MOVING PARTS (SWORD (OR SPITS), FIXING HANDLE, MOVING BODY FRAME AND OIL DRAWER) BY USING AN ADHESIVE TAPE.
- TAKE NECESSARY PROTECTIVE MEASURES AGAINST POSSIBLE STROKES TO SWITCH ON/OFF KNOBS, CABLE OUTLET SLEEVE AND RELIEF VALVE CONNECTION SLEEVE, AND OTHER SURFACES. DO NOT PUT ANY LOAD ON THE APPLIANCE HEAVIER THAN ITS OWN WEIGHT.
- KEEP THE PRODUCT IN NORMAL POSITION DURING MOVEMENT.
- IF THE APPLIANCE SHALL NOT BE USED OR KEPT FOR SALE FOR EXTENDED TIME, STORE IT INDOOR IN DRY, DUST AND DAMP FREE CONDITIONS.

 
 
## 7. FIRST CLEANING AND FIRST HEATING

- BEFORE FIRST OPERATION, REMOVE NYLON ON YOUR EQUIPMENT AND WIPE INNER AND OUTER PARTS WITH A DAMP CLOTH AND THEN WIPE DRY.
- DO NOT USE DETERGENT FOR WIPING OPERATION.
- A TEMPORARY ODOUR AND SMOKE MAY OCCUR AT THE HEATED PARTS OF YOUR EQUIPMENT DURING FIRST HEATING.
- ODOUR AND ANY POSSIBLE SMOKE SHALL DISAPPEAR SOON. ODOUR AND SMOKE DO NOT INDICATE INCORRECT CONNECTION OR DEFECTIVE EQUIPMENT.

## OPERATION:


# 8. SWITCHING ON/OFF

- THE HEATERS WORK INDEPENDENTLY.
- THE HEATERS ARE TURNED ON BY THE ON/OFF KEY ON THE FIXED FRAME.
- TO TURN THE KEY ON, TURN AND BRING IT TO 1, 2, 3 OR MAX POSITION.
- TO BURN THEM AT THE LOWEST HEAT, TURN IT TO “1” POSITION. RADIANT TURNS OFF AND THEN ON AUTOMATICALLY IN SHORT TIME INTERVALS.
- TO BURN THEM WITH LONGER TIME INTERVALS, TURN AND BRING IT COMPARATIVELY TO “1”, “2” OR “3” POSITION.
- BRING THE KEYS TO “MAX” POSITION FOR A CONTINUOUS USE.
- TO TURN IT OFF, TURN AND BRING IT TO “0” POSITION.
- TO TURN SKEWERS AROUND, TURN ON AND OFF THE MOTOR BY CONTROL KNOB 8 (SEE PAGE 3).
- TO TURN THE MOTOR ON, BRING THE KEY TO “I” OR “II” POSITION. THESE POSITIONS SHOW RIGHT OR LEFT ROTATION DIRECTION.
- TO TURN THE MOTOR OFF, BRING THE KEY TO “O” POSITION.

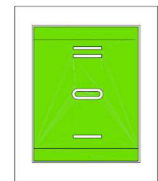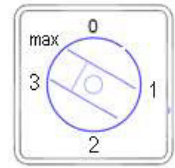


# 9. OPERATION

 - ENSURE THAT ELECTRIC CONNECTION OF THE EQUIPMENT IS DONE IN ACCORDANCE WITH RELEVANT STANDARDS.
- TO TURN THE KEY ON, TURN AND BRING IT TO 1, 2, 3 OR MAX POSITION.
- TO BURN THEM AT THE LOWEST HEAT, TURN IT TO “1” POSITION. RADIANT TURNS OFF AND THEN ON AUTOMATICALLY IN SHORT TIME INTERVALS.
- TO BURN THEM WITH LONGER TIME INTERVALS COMPARATIVELY TO “1” POSITION TURN AND BRING IT TO “2” OR “3” POSITION.
- BRING THE KEYS TO “MAX” POSITION FOR A CONTINUOUS USE.
- TO TURN THE KEY OFF, TURN AND BRING IT TO “0” POSITION.
- IF IT IS REQUIRED TO OPERATE HEATERS AT LOW HEAT, TURN ON-OFF KEY (3.) OF HEATER MECHANISM, AND BRING IT “1” POSITION.

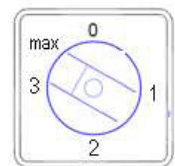

# 10. CLEANING AND MAINTENANCE

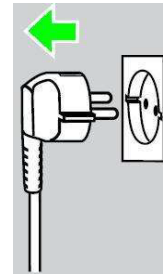 

- DISCONNECT THE PLUG OF THE EQUIPMENT (OR MOTOR) FROM THE MAINS SOCKET.
- ENSURE THAT ALL SWITCHES ARE OFF.
- FIRST ALLOW THE EQUIPMENT TO GET COOL. CLEAN ANY ROUGH DIRT BY USE OF A DRY CLOTH.
- DO NOT POUR USED OIL INTO THE SINK.
- IF APPLICABLE, YOU CAN PUT THE BOTTLE IN THE BIN FOR NON-COMPOSTABLE WASTE (NOT IN THE COMPOSTABLE WASTE BIN) OR DISPOSE OF THEM IN ACCORDANCE WITH THE REGULATIONS IN YOUR COUNTRY.
- CLEAN BY USE OF A WARM SOAP CLOTH.
- NEVER USE STEAM AND WATER PRESSURED CLEANING INSTRUMENT TO CLEAN THE EQUIPMENT. PRESSURE STEAM AND WATER MAY ENTER THE ELECTRIC-CONDUCTING SECTIONS, CAUSING DAMAGES. RG DISTRIBUTORS LTD T/A ECATERING IS NOT RESPONSIBLE FOR ANY RESULTING DAMAGES.
- DO NOT USE CLEANING AGENTS SUCH AS STAIN REMOVER AND ANTI-CORROSIVE AGENT THAT HAVE ABRASIVE EFFECTS AND SPONGES WITH HARD SURFACE.
- AFTER EACH WET CLEANING OPERATION, WIPE YOUR EQUIPMENT DRY WITH A CLEAN CLOTH DEFINITELY.
- NEVER USE CHEMICALS OR STEEL CLEANING MATERIALS. WIPE ANY DIRT IMMEDIATELY. LONG-REMAINING DIRT MAY GIVE DAMAGE TO THE SURFACE.
- CLEAN YOUR EQUIPMENT REGULARLY.

# 11. TROUBLESHOOTING

EQUIPMENT SHOULD BE REPAIRED ONLY BY AUTHORIZED SERVICE CENTER. ANY IMPROPER REPAIR OPERATIONS TO BE PERFORMED BY NON-AUTHORIZED SERVICE PEOPLE MAY CAUSE RISK FOR THE USER.

PROBLEM	POSSIBLE CAUSE	SOLUTION
APPLIANCE DOES NOT HEAT OR HEATING RESISTANCES DO NOT OPERATE	THE MAIN FUSE BLOWN.	CHECK THE MAIN FUSE.
	THE ON/OFF KEY IS OFF.	TURN THE ON/OFF KEY ON.
	HEATING ELEMENT IS OUT OF ORDER.	SWITCH OFF THE FUSE.
	THE ON/OFF KEY IS OUT OF ORDER.	TURN ALL "ON/OFF KEY" OF HEATER MECHANISM OFF.
	CIRCUIT SYSTEM IS OUT OF ORDER.	PLEASE CONTACT OUR CUSTOMER SERVICE TEAM.
MOTOR DOES NOT WORK	THE MOTOR CONTROL KEY IS OUT OF ORDER	<ul style="list-style-type: none"> <li>- CHECK THE MAIN FUSE.</li> <li>- TURN THE MOTOR CONTROL KEY OFF.</li> <li>- UNPLUG THE APPLIANCE.</li> <li>- TURN THE ALL SWITCH OFF.</li> <li>- PLEASE CONTACT OUR CUSTOMER SERVICE TEAM.</li> </ul>
	MOTOR IS OUT OF ORDER	



 
## 12. ELECTRICAL CONNECTION



- ELECTRIC CONNECTION OF THE EQUIPMENT SHOULD BE PERFORMED BY A QUALIFIED ELECTRICIAN. SUCH COMMISSIONED ELECTRICIAN SHOULD BE INFORMED ABOUT RULES AND ADDITIONAL SANCTIONS IMPOSED BY LOCAL POWER DISTRIBUTION COMPANIES IN YOUR COUNTRY AND STRICTLY OBSERVE SUCH RULES.
- VOLTAGE 400V / 50-60HZ

## 13. TECHNICAL SPECIFICATIONS

### ELECTRIC CONNECTION

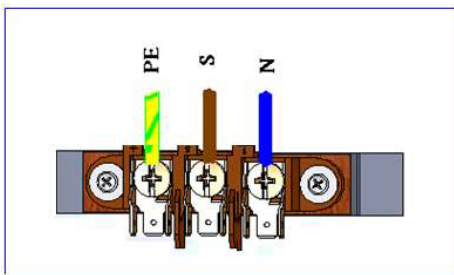

#### FLEXIBLE CABLE (MAIN CORD)

S : LIVE ( BROWN ) /

N : NEUTRAL ( BLUE ) /

PE : EARTH ( GREEN AND YELLOW ) /

Model	ROT001	ROT002
Capacity	8-10 Birds	12-15 Birds
Width	1150 mm	1150 mm
Depth	472 mm	472 mm
Height	605 mm	793 mm
Weight	65 kg	85 kg
Voltage	400V 50-60 Hz	400V 50-60 Hz
Power	6 kW	9 kW

## 14. WARNING SIGNS



Warning



Hot



Glove



Upwards



Potential Grounding



Fragile



Protect from humidity

 


Grounding



Electric

# 15. ELECTRIC CIRCUIT DIAGRAM

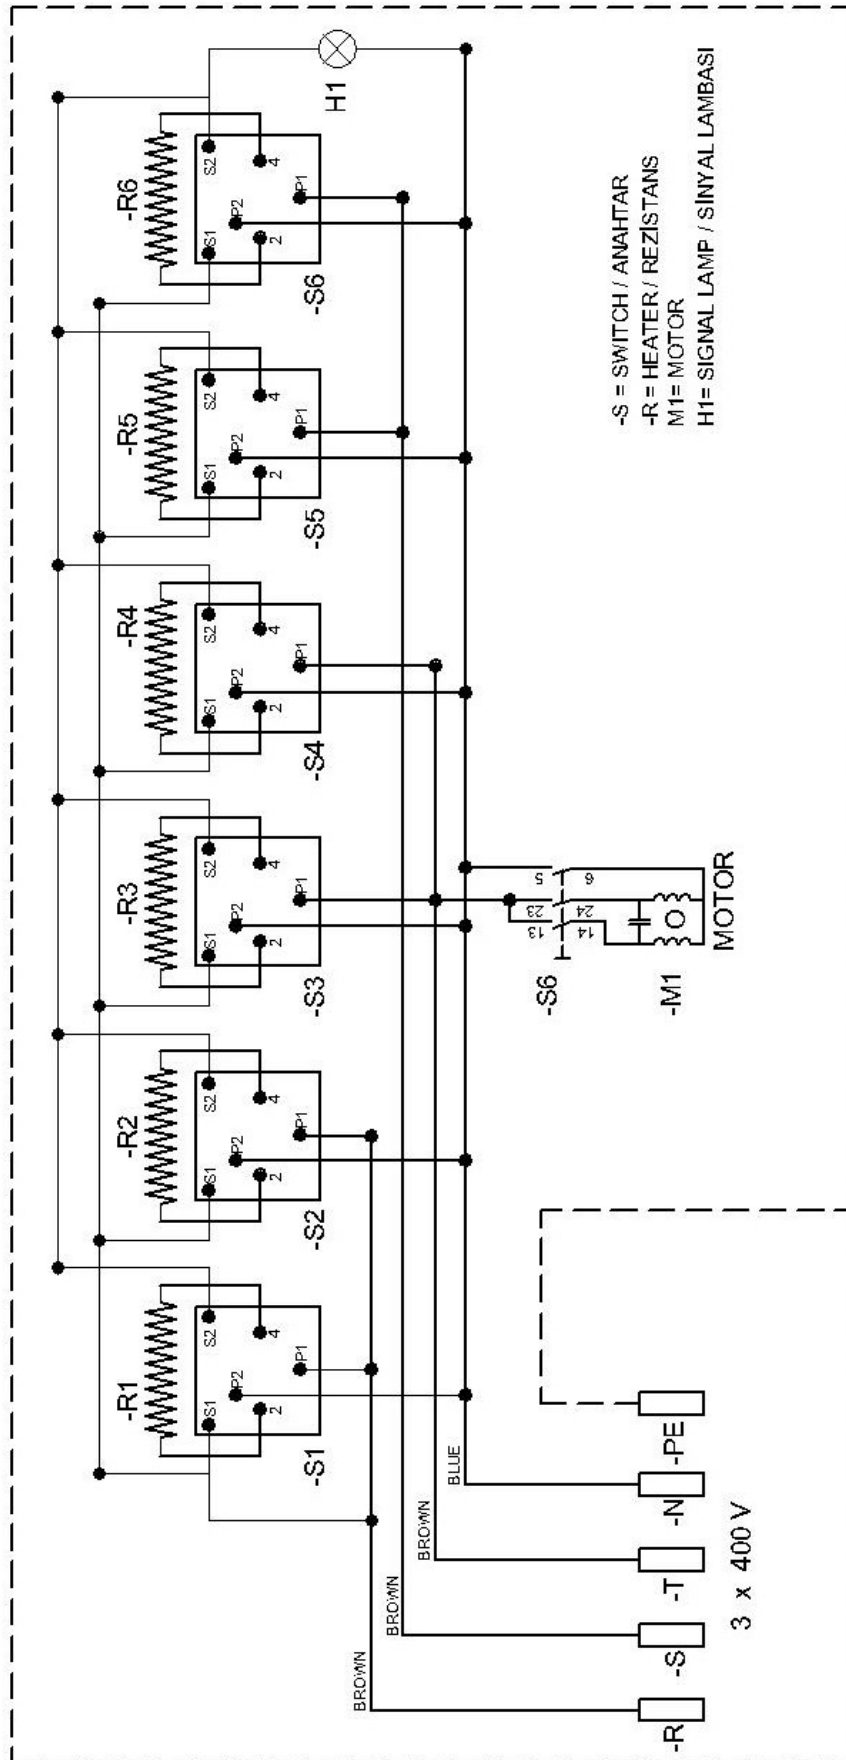

# 16. WARRANTY

THE APPLIANCE IS GUARANTEED FOR ONE YEAR FROM THE DATE OF DELIVERY OF THE APPLIANCE AGAINST DEFECTS IN PRODUCTION, WORKMANSHIP AND ASSEMBLING ONLY IF APPLIANCE IS USED IN ACCORDANCE WITH THE INSTRUCTIONS WRITTEN IN USER MANUAL AND REPAIRED ONLY BY A QUALIFIED/CERTIFIED ENGINEER. THIS GUARANTEE IS ONLY VALID IF ALL THE INSTRUCTIONS, OBLIGATION AND RESPONSIBILITY WRITTEN FOR USER IN USER MANUAL AND THIS FORM FOLLOWED BY USER.

- THIS WARRANTY DOES NOT COVER DAMAGE ARISING FOR MISUSE OF THE APPLIANCE AS WELL AS FOLLOWING POINTS;
- THIS WARRANTY DOES NOT COVER DAMAGE ARISING BECAUSE OF USER MISTAKES.
- THIS WARRANTY DOES NOT COVER DAMAGE ARISING DURING TRANSPORTATION, INSTALLATION OR WHILE MOVING THE PRODUCT, OR TO ANY TRANSPORTATION COSTS OF THE PRODUCT OR ANY PARTS THEREOF TO AND FROM THE OWNER, UNLESS OTHERWISE SPECIFIED IN THESE WARRANTY CONDITIONS.
- THE WARRANTY WILL NOT APPLY IF DAMAGE, MALFUNCTION OR FAILURE RESULTING FROM USE ON AN INCORRECT VOLTAGE, POWER SURGES AND VOLTAGE DIPS, VOLTAGE SUPPLY PROBLEMS, USE OF DEFECTIVE OR INCOMPATIBLE ACCESSORIES, FAILURE TO GROUND, EXPOSURE TO ABNORMALLY CORROSIVE CONDITIONS OR FOREIGN OBJECT IN THE PRODUCT.
- THE WARRANTY WILL NOT APPLY IF DAMAGE, MALFUNCTION OR FAILURE RESULTING FROM FIRE OR THUNDERSTORM ACTIVITY,
- THE WARRANTY WILL NOT APPLY IF DAMAGE, MALFUNCTION OR FAILURE RESULTING FROM ALTERATIONS, ACCIDENT, MISUSE, ABUSE, DAMAGING SYNTHETIC CHEMICAL LIQUID SPILLAGE, IMPROPER INSTALLATION OR OPERATION, LACK OF REASONABLE CARE, LOSS OF PARTS, TAMPERING OR ATTEMPTED REPAIR BY A PERSON NOT AUTHORIZED BY RG DISTRIBUTORS LTD
- THE WARRANTY DOES NOT COVER NORMAL WEAR OF THE PRODUCT OR PARTS AND THE PARTS THAT COULD BE USED AS SPARE PARTS.
- THE WARRANTY WILL NOT APPLY IF DAMAGE, MALFUNCTION OR FAILURE RESULTING FROM USE AGAINST THE INSTRUCTIONS WRITTEN IN USER MANUAL AND REPAIRED ONLY BY A SERVICE PERSON AUTHORIZED BY RG DISTRIBUTORS LTD.
- THE WARRANTY WILL NOT APPLY IF THE FACTORY-APPLIED SERIAL NUMBER HAS BEEN ALTERED OR REMOVED FROM THE PRODUCT.

**2 SPIT CHICKEN ROTISSERIE OVEN 8-10 CHICKENS – ELECTRIC · SKU: ROTO01**

**3 SPIT CHICKEN ROTISSERIE OVEN 12-15 CHICKENS – ELECTRIC · SKU: ROTO02**



**STEP UP TO THE PLATE**