 


CONTENDER

STEP UP TO THE PLATE

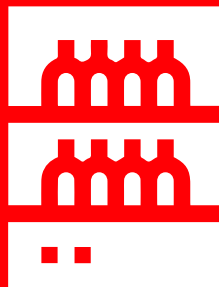

CONTENDER SINGLE DOOR DRINKS FRIDGE




RRG061 | RUG026

CONTENTS

PART 1.	TECHNICAL FEATURES	4
PART 2.	INTRODUCTION	6
PART 3.	SPECIFICATIONS	4
PART 4.	ASSEMBLY	5
PART 5.	OPERATION	5
PART 6.	CLEANING, MAINTAINING AND TRANSPORTING	12
PART 7.	TROUBLE SHOOTING	13
PART 8.	CAREL ECOBOX AND CAREL ENERGY SAVING CONTROLLED MODELS	14
PART 9.	COMPLIANCE	15







   I. TECHNICAL FEATURES

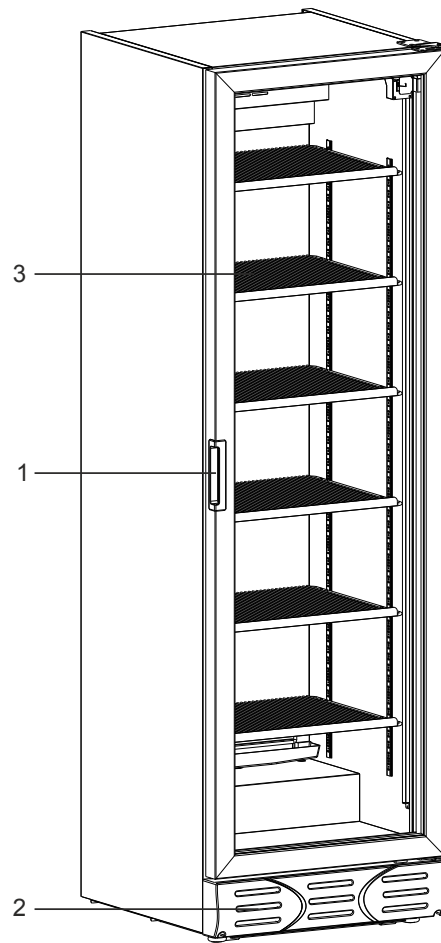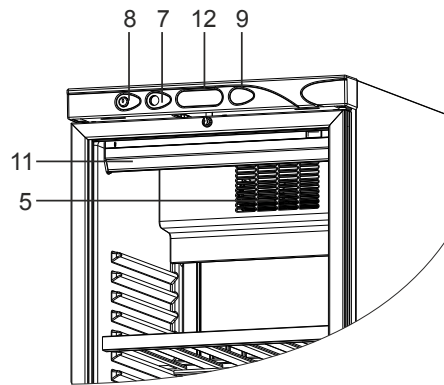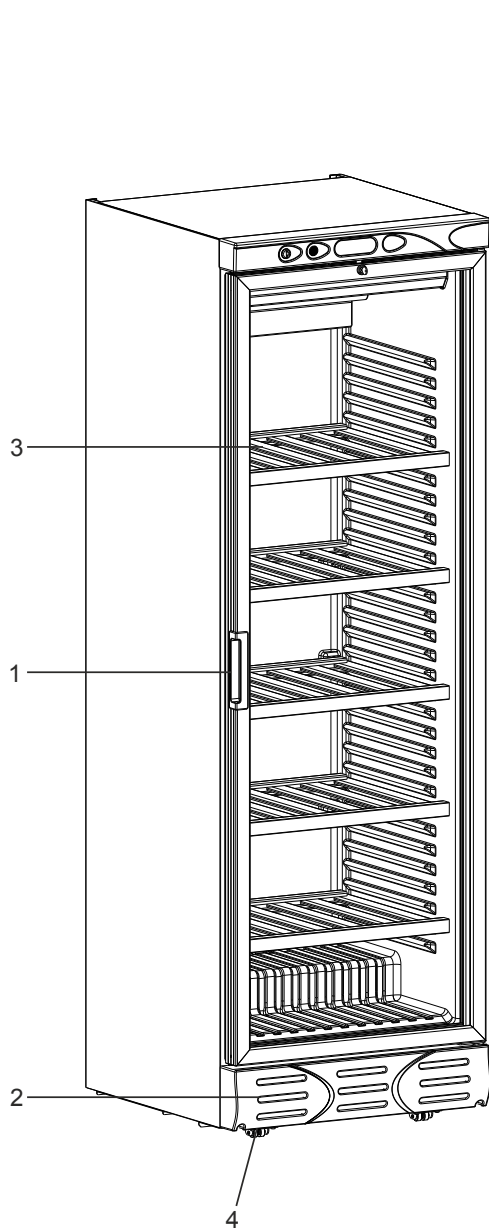

- 1 DOOR
- 2 POWER COMPARTMENT
- 3 SHELF
- 4 ADJUSTABLE HEIGHT
- 5 INTERIOR VENTILATION FAN
- 6 CANOPY
- 7 GREEN LIGHT

    - 8 THERMOSTAT SETTING KNOB
- 9 LIGHTING SWITCH
- 10 FAN SWITCH
- 11 INTERIOR LIGHTING
- 12 THERMOMETER
- 13 ELECTRONIC THERMOSTAT (OPTIONAL)

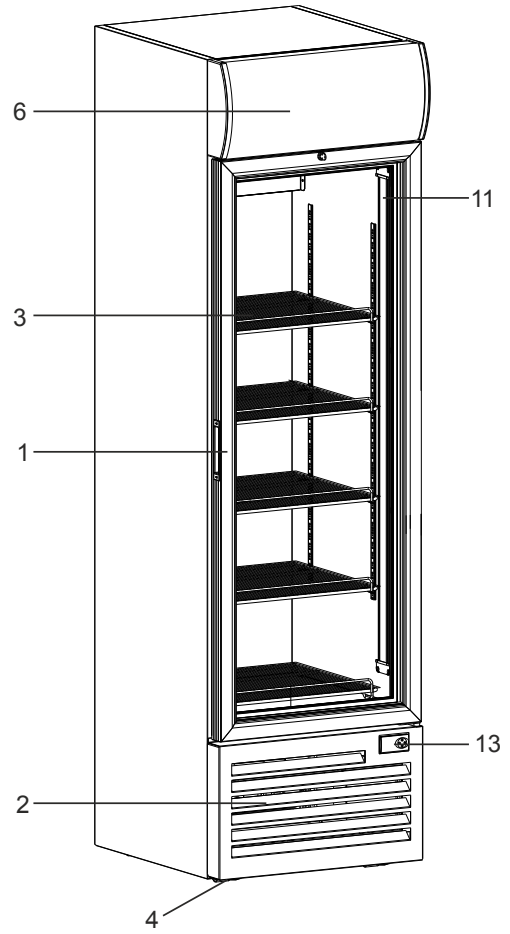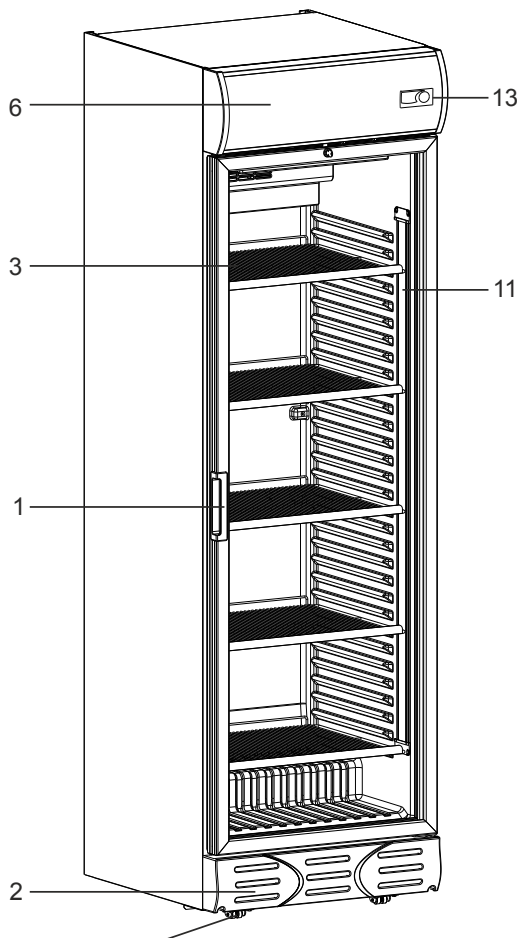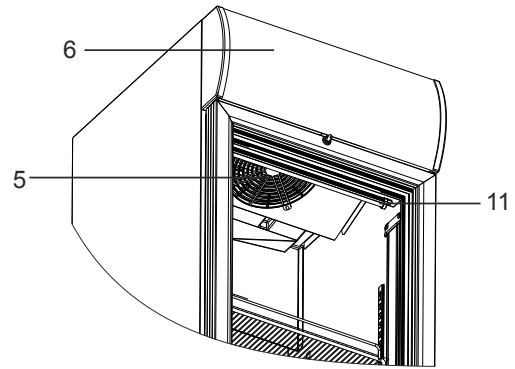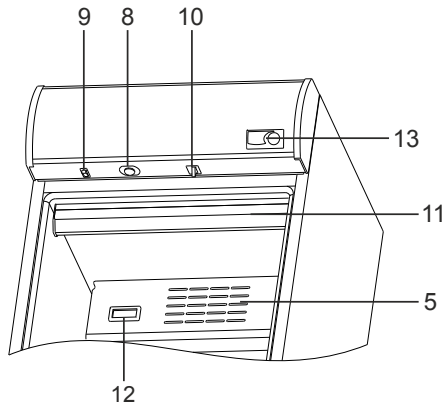

NOTE: THE INFORMATION AND IMAGES PROVIDED ARE OPTIONAL. THEY MAY VARY DUE TO MODELS AND VERSIONS.

2. INTRODUCTION

THIS OPERATING MANUAL HAS BEEN DESIGNED TO FACILITATE THE USE OF YOUR SINGLE DOOR DRINKS FRIDGE WITH MAXIMUM EFFICIENCY OVER THE YEARS. IN ALL OF THE MANUFACTURING PROCESSES “ENVIRONMENTALLY FRIENDLY” TECHNOLOGIES ARE USED AS WELL AS MATERIALS AND REFRIGERANTS THAT ARE NOT HARMFUL TO THE NATURE. PLEASE READ THIS MANUAL CAREFULLY BEFORE YOU START OPERATING YOUR DRINKS FRIDGE IN ORDER TO PREVENT USER DEFECTS AND ENSURE MAXIMUM EFFICIENCY FROM THIS PRODUCT THAT HAS BEEN MANUFACTURED TO SERVE YOU OVER THE YEARS. INSPECT THE DRINKS FRIDGE IMMEDIATELY ON DELIVERY FOR ANY DAMAGE. IN CASE OF DAMAGE, CONTACT YOUR AUTHORISED DEALER WITHIN 24 HOURS.

ATTENTION: IT REQUIRES A LAPSE OF A MINIMUM OF 2 HOURS AFTER ANY TRANSPORTATION BEFORE YOU START OPERATING YOUR DRINKS FRIDGE. IF THE FRIDGE HAS REMAINED IN AN ENVIRONMENT, THE TEMPERATURE OF WHICH WAS BELOW 0°C FOR A LONG PERIOD, ALLOW FOR THE COMPRESSOR TEMPERATURE TO REACH BEYOND +5 °C BEFORE RE-OPERATING THE FRIDGE.

3. SPECIFICATIONS

PRODUCT CODE	DESCRIPTION	OPERATING TEMPERATURE °C	INTERNAL DIMENSIONS W X D X H (MM)	EXTERNAL DIMENSIONS W X D X H (MM)	MAX. SHELF LOAD (NET) KG
RRG06I	SINGLE DOOR HINGED DRINKS FRIDGE I33L	0/+10	430X456X774	500X580X865	3I
RUG026	SINGLE GLASS DOOR FRIDGE WITH LIGHT UP CANOPY	0/+10	490X447X1570	595X650X2000	4I

VALUES SPECIFIED IN THE ABOVE TABLE ARE GIVEN ACCORDING TO STANDARD VALUES AND CAN VARY BY OPTIONAL FEATURES. TYPE LABEL IS LOCATED IN THE REFRIGERANT PART OF THE CABINET. PLEASE SEE THE BACK PAGE OF THE GUIDE FOR THE TYPE LABEL SAMPLE.

CLIMATE CLASSES			
CLASS	TEMPERATURE °C	RELATIVE HUMIDITY %	DEW POINT °C
0	20	50	9.3
1	16	80	12.6
2	22	65	15.2
3	25	60	16.7
4	30	55	20.0
5	40	40	23.9
6	27	70	21.1
7	35	75	30.0
6	24	55	14.4

4. ASSEMBLY

- AIR CIRCULATION AT THE REAR IS REQUIRED FOR THE FRIDGE TO OPERATE EFFICIENTLY.
- MOVE THE FRIDGE BACKWARDS TO PLACE IT PROPERLY.
- ALLOW MINIMUM 10 CM OF SPACE FROM THE SIDES AND THE REAR IN ORDER TO ENSURE PROPER AIR CIRCULATION.
- LEAVE THE TOP OF THE FRIDGE FREE.
- ALLOW A MINIMUM OF 10CM OF SPACE FROM THE REAR AND MINIMUM 30CM OF SPACE FROM THE SIDES FOR PROPER AIR CIRCULATION
- YOUR FRIDGE IS NOW READY TO PLUG IN .

5. OPERATION

AVOID BLOCKING AIR CIRCULATION INSIDE THE FRIDGE, WHEN LOADING THE VISI/COOLER WITH FOOD PRODUCTS. OTHERWISE UNDESIRED AND EXTENSIVE TEMPERATURE VARIANCES MAY OCCUR BETWEEN THE TOP AND BOTTOM COMPARTMENTS OF THE FRIDGE.

CONTROL PANEL:

THE CONTROL PANEL CONSISTS OF THE FOLLOWING COMPONENTS DEPENDING ON THE MODEL:

GREEN LIGHT (OPTIONAL):

IT IS LIT SO LONG AS THE FRIDGE IS CONNECTED TO THE ELECTRIC SUPPLY.

THERMOSTAT SETTING KNOB (OPTIONAL):

IT IS USED TO REGULATE THE INTERNAL TEMPERATURE OF YOUR FRIDGE.

THERMOSTAT ADJUSTMENT IS THE MOST OPTIMUM ADJUSTMENT IN PRODUCTS WITH MECHANICAL THERMOSTAT IN FACTORY DEFAULTS. IT IS RECOMMENDED NOT TO BE REPLACED AS LONG AS IT IS NOT TROUBLED WITH THE INTER PRODUCT TEMPERATURE. IF YOU THINK THAT THE PRODUCT IS NOT IN THE DESIRED TEMPERATURE RANGE YOU CAN ADJUST THE THERMOSTAT.

THERMOSTAT SETTING MUST BE DONE ACCORDING TO THE FEATURES OF THE PRODUCTS TO BE PRESERVED. TEMPERATURE SETTING CAN BE DONE BY MEANS OF TURNING THE BLACK THERMOSTAT KNOB ON THE CONTROL PANEL BY THE HELP OF A COIN OR SIMILAR OBJECT. TURNING THE KNOB RIGHT DECREASES THE INTERNAL TEMPERATURE, WHEREAS TURNING IT LEFT INCREASES THE INTERNAL TEMPERATURE. TURNING THE KNOB LEFTMOST STOPS THE COMPRESSOR, WHICH IN TURN STOPS THE CHILLING PROCESS, ALTHOUGH THE ELECTRIC CURRENT TO THE FRIDGE IS NOT CUT OFF.

LIGHT DIMMER (OPTIONAL) :

FOR SOME MODELS THERE IS A LIGHT DIMMER. YOU CAN DECREASE AND INCREASE THE LIGHT INTENSITY WITH THIS SWITCH. AT THE "OFF" POSITION LIGHTS WILL TURN OFF.

INTERNAL VENTILATION FAN SWITCH (OPTIONAL):

IT USED TO PROVIDE AIR CIRCULATION INSIDE THE FRIDGE.

 
LIGHTING SWITCH (OPTIONAL):

IT IS USED TO TURN ON OR OFF THE LIGHT OF YOUR FRIDGE.


REPLACING THE FLUORESCENT LIGHTING:

(IF YOUR PRODUCT HAS FLUORESCENT LAMP)


BEFORE DISMANTLING THE LAMP, ALWAYS UNPLUG YOUR FRIDGE. AFTER DISMANTLING THE LAMP COVER INSIDE THE FRIDGE, REMOVE THE LAMP AND ALWAYS REPLACE IT WITH A LAMP OF THE SAME FEATURES (LENGTH, POWER ETC.)

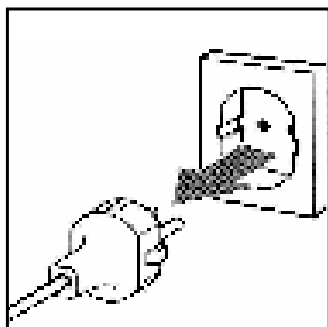


UNPLUG YOUR FRIDGE.

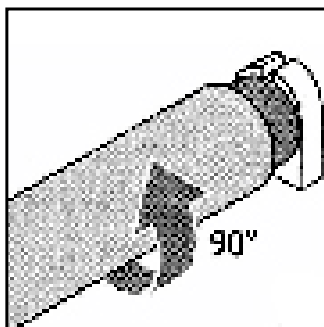 


ROTATE THE LAMP 90°.

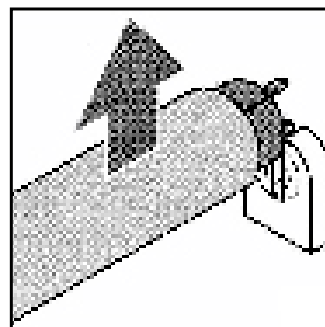 


REMOVE THE DESTROYED FLUORESCENT LAMP.

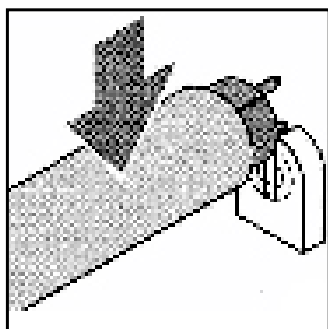 

PLACE THE NEW FLUORESCENT LAMP.

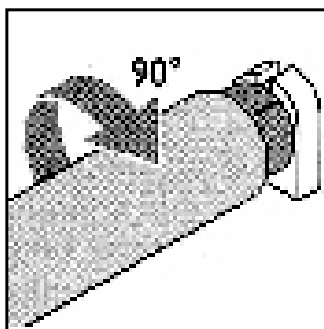 

ROTATE IT 90°.

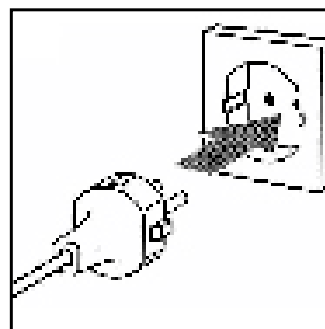 

PLUG YOUR FRIDGE BACK IN AND SWITCH ON.

WARNING

YOUR COOLER CAN HAVE A FLUORESCENT LAMP. IF THE FLUORESCENT LAMP DON'T ILLUMINATE OR START TO BLINKING, PLEASE CALL TECHNICAL SERVICE TO REPAIR IT IN A SHORT WHILE. PLEASE DO NOT REMAIN YOUR COOLER WITH NON WORKING LIGHTING SYSTEM. YOUR COOLER CAN HAVE LED ILLUMINATION. IF YOU FACE ANY PROBLEMS WITH ILLUMINATION, NEVER TRY TO REPAIR IT YOURSELF. INFORM AN AUTHORISED SERVICE.

MOUNTING THE SHELVES:

FOR MODELS WITH OPTION-1 :

THERE ARE SHELVES SHIPPED INSIDE THE FRIDGE.

- FIRST INSERT THE UPPERMOST SHELF IN THE UPPERMOST HOOKS IN THE BODY.
- INSERT THE OTHERS CORRESPONDINGLY USING THE SAME METHOD. CHILLING PROCESS IN THE BODY TAKES PLACE THROUGH THE INTERNAL AIR CIRCULATION. THEREFORE DO NOT PLACE THE SHELVES VERY CLOSE TO ONE ANOTHER.

FOR MODELS WITH OPTION-2 :

 
 
THERE ARE SHELVES AND SHELF SUPPORTS SHIPPED INSIDE THE FRIDGE.

CARRY OUT THE FOLLOWING TO MOUNT THE SHELVES:

- PILASTERS ARE NUMBERED TO PROVIDE HEIGHT ADJUSTMENT BETWEEN THE SHELVES IN LINE WITH THE PRODUCT REQUIREMENTS. PLACE THE SHELF SUPPORTS INTO CORRESPONDING NOTCHES ON THE PILASTERS. FOR AN EASY PLACEMENT, USE A PAIR OF PINCERS TO GRIP THE SUPPORT ENDS.
- LAY DOWN THE SHELVES ON THE FRIDGE FLOOR. (MAKE SURE THAT THE RIGHT-ANGLED (90°) SIDE IS AT THE REAR).
- HOLD THE UPPERMOST SHELF; TILT ONE SIDE AND PLACE ON THE HOOKS ON THE CORRESPONDING SUPPORTS.
- DO THE SAME FOR THE REMAINING SHELVES AND MOUNT THEM ALL.
- IF PRESENT, PLACE THE BOTTOM SHELF ON THE BASE OF THE FRIDGE.

ATTENTION

DO NOT LOAD ANYTHING ON THE BASE OF YOUR FRIDGE. ALWAYS USE THE BOTTOM SHELF.

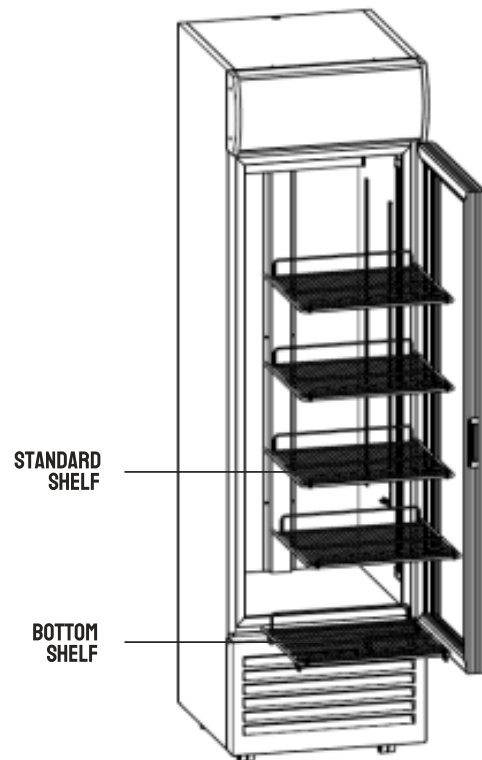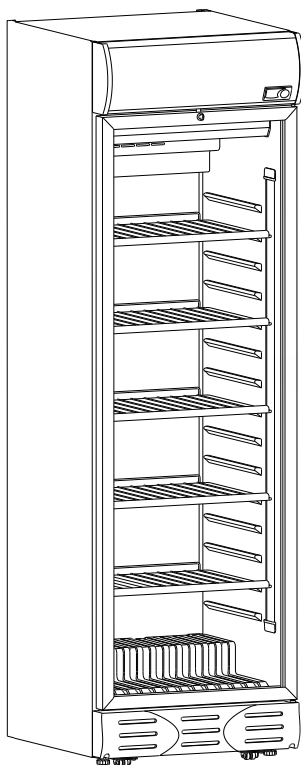


PLEASE INSERT SHELVES AS SHOWN, KEEPING PRICE LOGO STICKER STRIP IN FRONT

REMOVING THE PALLET AND INSERTING THE FEET:

FOR MODELS WITH METAL SHEET CONNECTORS:

YOUR CABINET HAS BEEN FIXED WITH 4 METAL BRACKETS ON WOODEN PALLET BEFORE SHIPPING . PLEASE FOLLOW THE INSTRUCTIONS BELOW BEFORE POSITIONING THE FRIDGE.

 - DETACH BY UNBOLTING 3 SCREWS AND REMOVE METAL BRACKET FIXED CABINET AND WOODEN PALLET IN FRONT AND BACK SECTIONS THROUGH A CUTTER DEVICE.
- LEAN CABINET BACKWARDS FROM BACKSIDE AND REMOVE PALLET FROM UNDERNEATH CABINET. OBSERVE FLOOR OF CABINET AND IF NOT SMOOTH, PUT PRODUCT ON SCALES.

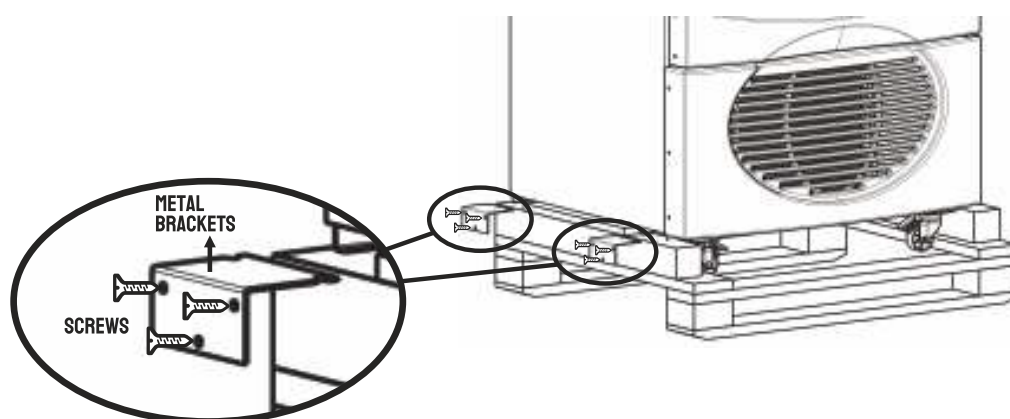

FOR MODELS WITHOUT METAL SHEET CONNECTORS:

YOUR SINGLE DOOR FRIDGE HAS BEEN DELIVERED ON A WOODEN PALLET, FIXED TO THE BODY AT FOUR CORNERS. PLEASE CARRY OUT THE FOLLOWING TO DETACH THE PALLET BEFORE THE BODY IS SET IN ITS FINAL OPERATING LOCATION:

- CUT THE 4 CABLE TIES FIXING TO PALLET TO THE COOLER CHASSIS BY THE MEANS OF A HAND TOOL
- USE A WRENCH TO LOOSEN AND REMOVE THE HEAD SCREWS ON THE FRONT AND REAR CORNERS THAT FIX THE PALLET TO THE BASE.
- CAREFULLY DETACH THE PALLET FROM THE BODY BASE. PLEASE FIND THE FEET OF THE FRIDGE PROVIDED INTERIOR. INSERT THEM IN THE SCREWED SOCKETS AT THE BOTTOM OF THE FRIDGE AND MAKE THE HEIGHT ADJUSTMENT.

CAUTION:

 
THE ADJUSTABLE LEGS ON THE FRONT SIDE OF THE CABINET SHOULD NEVER BE OPENED AT THE SAME TIME. DEPENDING ON THE IMBALANCE OF THE PRODUCT, ONLY ONE OF THE ADJUSTABLE LEGS ON THE RIGHT OR LEFT SIDE SHOULD BE OPENED AND THE PRODUCT SHOULD BE BALANCED IN THIS WAY.

SAFETY FEET:

IF YOU HAVE A WHEELED PRODUCT, THERE ARE 2 SAFETY FEET ON THE FRONT OF YOUR PRODUCT.

ATTENTION !!!


- UNLESS THEY ARE DAMAGED AND REPLACED BY THE SAME FEET DO NOT REMOVE THE SAFETY FEET UNDER ANY CIRCUMSTANCES!
- NEVER CHANGE THE SAFETY FEET WHILE THE COOLER IS RUNNING!
- CHANGE THE SAFETY FEET BY TILTING THE PRODUCT TOWARDS THE BACK OR RIGHT SIDE OF THE PRODUCT.
- NEVER CHANGE THE SAFETY FEET WHILE THE COOLER IS IN THE UPRIGHT POSITION.

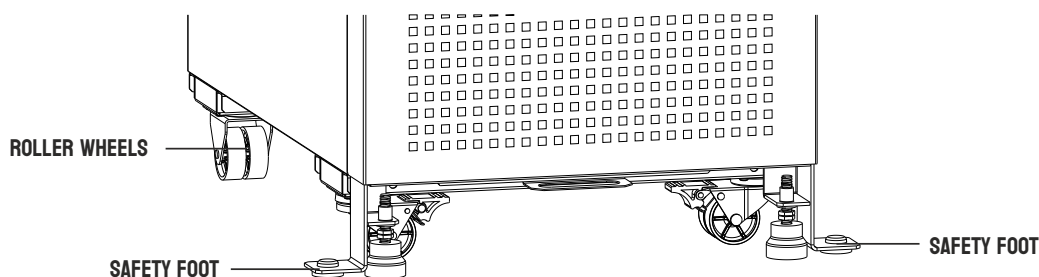

ONLY AVAILABLE FOR MODELS HAVING A LEAKAGE CURRENT RELAY:

THERE MIGHT BE A LEAKAGE CURRENT RELAY IN THE FEEDER CABLE OF YOUR REFRIGERATOR. TO TEST IF THE LEAKAGE CURRENT RELAY WORKS PROPERLY, PRESS THE YELLOW "TEST" BUTTON SHOWN IN THE FOLLOWING PICTURE. THE LIGHT WILL BE OFF AND THE POWER OF YOUR REFRIGERATOR WILL BE STOPPED WHEN YOU PRESS IT . YOU CAN TURN THE REFRIGERATOR ON AGAIN BY PRESSING THE "RESET" BUTTON.

 IN CASE OF ANY LEAKAGE CURRENT, THE POWER OF YOUR REFRIGERATOR WILL BE STOPPED AUTOMATICALLY. IF YOUR REFRIGERATOR DOES NOT WORK AND THE LAMP CONNECTED TO THE PLUG IN CABLE (SHOWN IN FOLLOWING PICTURE) DOES NOT SHINE, PRESS THE "RESET" BUTTON. THE LIGHT WILL BE ON WHEN YOUR REFRIGERATOR WORKS. IF YOUR FRIDGE DOES NOT WORK AGAIN, PLEASE CONTACT YOUR SUPPLIER.

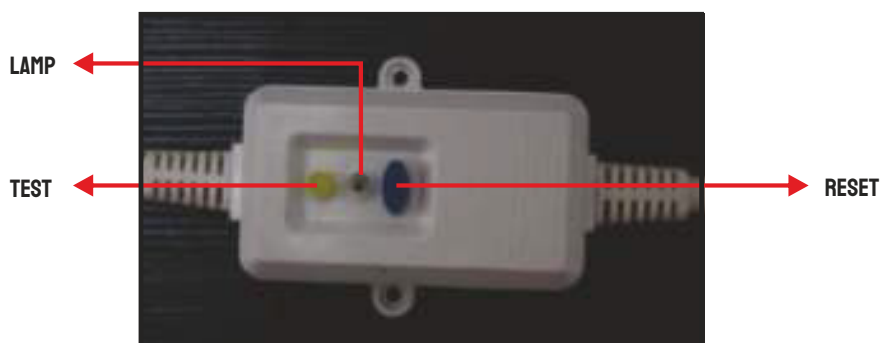

ONLY AVAILABLE FOR MODELS HAVING A VOLTAGE REGULATOR:

VOLTAGE REGULATOR OF YOUR REFRIGERATOR PROTECTS THE UNIT AGAINST MAINS VOLTAGE FLUCTUATIONS. WHEN MAINS VOLTAGE FLUCTUATES OUT OF PERMISSIBLE RANGE, THE VOLTAGE REGULATOR TURNS OFF THE POWER SUPPLY TO THE UNIT. THIS ENDS WHEN MAINS VOLTAGE IS BACK IN THE PERMISSIBLE RANGE, THE DEVICE WILL OPERATE AGAIN. HOWEVER, EVEN IN CASE MAINS VOLTAGE IS BACK IN PERMISSIBLE RANGE INSTANTLY, THE VOLTAGE REGULATOR WILL TURN ON THE POWER SUPPLY AFTER A 3 MINUTE DELAY TO PROTECT THE DEVICE AGAINST VOLTAGE PEAKS AND VOLTAGE DIPS. ONLY AVAILABLE FOR MODELS HAVING A LEAKAGE CURRENT RELAY.

DEFROSTING:

YOUR FRIDGE IS DEvised WITH AN AUTOMATIC DEFROSTING SYSTEM REGULATED BY THE THERMOSTAT. DEFROST WATER ACCUMULATES IN THE CHANNEL UNDERNEATH THE EVAPORATOR; IT IS THEN CARRIED TO THE DRIP TRAY BY THE HELP OF A HOSE WHERE IT EVAPORATES.

- AFTER DEFROSTING, CLEAN THE BODY AND MAKE SURE TO WIPE IT OUT LEAVING NO MOIST INSIDE.
- PLUG THE BODY AGAIN AND RELOAD THE FRIDGE AFTER ONE HOUR.

6. CLEANING, MAINTAINING AND TRANSPORTING

TO ENSURE HIGHER EFFICIENCY, YOUR FRIDGE MUST BE REGULARLY CLEANED. NEVER USE ANY CLEANING AGENT THAT CONTAINS ALCOHOL, SCOURING POWDER OR POWERFUL SOLVENTS. ALWAYS REMOVE THE PLUG FROM THE MAINS SOCKET BEFORE CLEANING THE FRIDGE. ADD TWO TEASPOONS OF BAKING SODA (BICARBONATE OF SODA) IN 1-LITRE OF WATER AND USE THIS MIXTURE TO CLEAN THE FRIDGE. CLEAN THE OUTER PART WITH A WET CLOTH AND THEN WIPE IT OUT.

ATTENTION:

NEVER USE ANY HOT WATER, ELECTRICAL HEATER, SHARP TOOLS OR SIMILAR AS THEY MAY HARM THE FRIDGE.

HOLIDAYS /STOP USING FOR A WHILE:

DO NOT UNPLUG YOUR FRIDGE IF YOU ARE GOING ON A SHORT BREAK OR NOT USING IT FOR A SHORT TIME. IF YOU ARE GOING ON A LONG HOLIDAY OR NOT USING THE FRIDGE FOR A LONG TIME, UNPLUG AND EMPTY IT. AFTER DEFROSTING, CLEAN THE FRIDGE AND WIPE IT OUT WITH A CLOTH. LEAVE THE DOOR OPEN TO PREVENT ODOUR BUILD-UP.

TRANSPORTING YOUR FRIDGE:

BEFORE RELOCATING THE BODY, UNPLUG IT FROM THE MAINS SOCKET, DEFROST IT, WIPE THE INTERIOR WALLS AND FLOOR WITH A DAMP CLOTH. PLACE THE PLASTIC BLOCKINGS BETWEEN THE GLASS-DOOR AND THE BODY AND CARRY IT IN THE NORMAL POSITION AS IT IS USED.

ATTENTION:


EXPANSION GAS (C-PENTANE) IS USED IN THE INSULATION SYSTEM OF THE FRIDGE. WHEN YOU DISPOSE OF THE FRIDGE, IT REQUIRES OBSERVING THE APPLICABLE LAWS AND RULES OF THE COUNTRY IN WHICH IT IS USED. CLEANING / MAINLINING OF YOUR COOLER'S CONDENSER MUST BE DONE AT LEAST TWO TIMES IN A YEAR BY AN AUTHORISED DEALER .

7. TROUBLESHOOTING

<p>THE FRIDGE DOES NOT FUNCTION;</p>	<ul style="list-style-type: none"> - CHECK IF THE FRIDGE IS PROPERLY PLUGGED IN THE MAINS SOCKET. - CHECK IF THERE IS ELECTRIC CURRENT TO THE MAINS SOCKET. - CHECK IF THE FUSE HAS BLOWN OUT. - CHECK IF THERE IS POWER FAILURE.
<p>THE FRIDGE RUNS MORE FREQUENTLY THAN DESIRED;</p>	<ul style="list-style-type: none"> - CHECK IF THE FRIDGE IS PROPERLY PLUGGED IN THE MAINS SOCKET. - CHECK IF THE DOOR IS OPENED VERY FREQUENTLY OR LEFT OPEN FOR A LONG TIME - CHECK IF THE THERMOSTAT IS SET TO CHILL MORE THAN DESIRED - CHECK IF THE COMPRESSOR COMPARTMENT IS PROPERLY VENTILATED OR COMPRESSOR COMPARTMENT NEEDS CLEANING.
<p>IF THE FRIDGE DOES NOT COOL ENOUGH;</p>	<ul style="list-style-type: none"> - CHECK THE TEMPERATURE SETTING - CHECK IF THE DOOR IS OPENED VERY FREQUENTLY OR LEFT OPEN FOR A LONG TIME - CHECK IF THE INTERNAL AIR CIRCULATION IS INTERRUPTED BY OVERLOADING - CLEANING/ MAINTAINING OF CONDENSER MIGHT NOT BE DONE. (PLEASE SEE SECTION 7)
<p>IF THERE IS ODOUR IN THE FRIDGE;</p>	<ul style="list-style-type: none"> - CHECK IF ODOROUS FOODSTUFF IS STORED IN UNCOVERED CONTAINERS - CHECK IF INSIDE IS PROPERLY CLEANED

IF YOUR FRIDGE STILL FUNCTIONS UNSATISFACTORILY AFTER CHECKING THE ABOVE-MENTIONED POINTS AND CARRYING OUT THE RECOMMENDATIONS, CONTACT YOUR SUPPLIER INFORMING THEM OF THE ISSUE AS WELL AS PROVIDING THE MODEL AND SERIAL NUMBER.

 8. CAREL ECOBOX AND CAREL ENERGY SAVING CONTROLLED MODELS

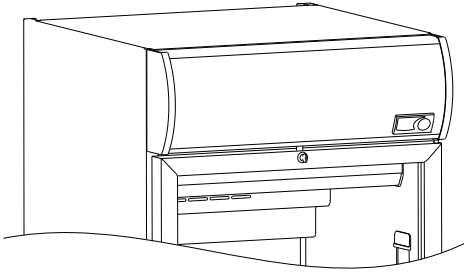

CONTROL UNIT FLASHES FOR A FEW SECONDS IN ORDER TO CHECK IF ALL CONNECTIONS ARE MADE CORRECTLY WHEN THE COOLER IS PLUGGED IN. THIS IS NORMAL, THEN THE DISPLAY WILL INDICATE CURRENT TEMPERATURE. SET TEMPERATURE HAS BEEN ADJUSTED TO KEEP YOUR BEVERAGES AT OPTIMUM TEMPERATURE, PLEASE DO NOT ATTEMPT TO CHANGE THE SETTINGS.



CAREL ECOBOX



CAREL ENERGY SAVING TYPE 1



CAREL ENERGY SAVING TYPE 2



LIGHT:

PUSHING FOR AT LEAST 0.5 SECONDS ON THE KEYPAD, WILL TOGGLE THE LIGHT STATUS. PUSHING THE KEYPAD, AND BEFORE THAN THE LIGHT STATUS WILL BE TOGGLE, THE DISPLAY WILL SHOW "ON" OR "OFF" IN ORDER TO WARN HOW THE LIGHT STATUS IS GOING TO CHANGE.



DAY/NIGHT MODE:

THE THERMOSTAT CHANGES ITS MODE AUTOMATICALLY. IF THE DOOR CONTINUOUSLY CLOSED FOR MORE THAN 4 HOUR THE THERMOSTAT MODE WILL BE NIGHT AND THE LIGHTS OF COOLER WILL BE OFF. LIGHTS CAN BE ON/OFF BY PUSHING THE LIGHT BUTTON. IF THE DOOR IS OPENED AT THE NIGHT MODE, THE MODE WILL BE DAY. AT THE NIGHT MODE YOUR COOLER CONSUME LESS ENERGY. IF YOU WANT TO CHANGE THE MODE TO THE NIGHT YOU MUST TO PUSH THE DAY NIGHT BUTTON, AFTER 60 SECOND FROM THE PUSHING THE MODE WILL BE NIGHT.



ECO MODE:

PUSHING THE KEYPAD AT LEAST 3 SECONDS THE ECO MODE WILL TOGGLE (IF ECO MODE IS RUNNING THEN IT WILL END, IF ECO MODE IS WAITING THEN IT WILL START). PUSHING THE KEYPAD, BEFORE THEN THE ECO MODE WILL TOGGLE, THE DISPLAY WILL SHOW "ECO" MODE WILL TOGGLE, THE DISPLAY WILL SHOW "ECO" (ECONOMY) OR "NOR" (NORMAL) IN ORDER TO WARN HOW THE FUNCTIONING MODE IS GOING TO CHANGE. IF THE THERMOSTAT IS AT THE ECO MODE, THE COOLER WILL CONSUME LESS ENERGY.

9. COMPLIANCE

THE SINGLE DOOR DRINKS FRIDGES DESCRIBED IN THIS MANUAL ARE MANUFACTURED AND INSPECTED IN COMPLIANCE WITH:

- TS EN ISO 23953-1
- TS EN ISO 23953-2
- TS EN 60335-2-89
- IEC 60335-2-89
- 2006/95/EC
- 2004/108/EC

CONTENDER SINGLE DOOR HINGED DRINKS FRIDGE 133L · RRG061
CONTENDER SINGLE GLASS DOOR FRIDGE WITH LIGHT UP CANOPY · RUG026



STEP UP TO THE PLATE

DISTRIBUTED BY RG DISTRIBUTORS LTD. TEL: 0333 358 3678