


CONTENDER

STEP UP TO THE PLATE

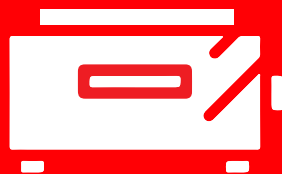

CONTENDER ELECTRIC CREPE MACHINES

GPS003 | GPS004 | GPD002

CONTENTS

1. INTRODUCTION	3
2. WARNINGS	3
3. DESCRIPTION & PUPOSE OF THE PRODUCT	3
4. SAFETY DETAILS	3
5. USING THE DEVICE	4
6. CLEANING & MAINTENANCE.....	5
7. LABELS	6
8. WARRANTY CONDITIONS	7

I. INTRODUCTION

DEAR USER, WE THANK YOU FOR CHOOSING OUR DEVICE AND FOR YOUR CONFIDENCE IN OUR COMPANY. OUR DEVICES ARE USED WITH YOU IN MANY CITIES AT HOME AND ABROAD. THE STANDARDS MANUFACTURE OUR DEVICE. WE STRONGLY REMIND YOU TO READ THE USER MANUAL AND HAVE IT READ TO GET THE DEVICE'S EFFICIENCY TO YOUR EXPECTATIONS AND USE IT FOR A LONG TIME. WE ASK YOU TO HEED THE FOLLOWING WARNINGS BEFORE CALLING OUR SERVICE.

2. WARNINGS








PLEASE READ THE MANUAL CAREFULLY BEFORE INSTALLING AND USING THE DEVICE, AND MAKE SURE THAT THOSE WHO USE IT READ IT. THE DEVICE WILL BE EXCLUDED FROM THE WARRANTY WHEN YOU START THE MACHINE WITHOUT READING THE MANUAL. THE MANUAL THAT PROVIDES INFORMATION ABOUT OUR PURCHASED PRODUCT'S INSTALLATION, USE, AND MAINTENANCE SHOULD BE READ CAREFULLY. THE ELECTRICAL INSTALLATION TO WHICH THE DEVICE WILL BE CONNECTED MUST BE BY THE LEGAL REGULATIONS. FAILURES IN YOUR INSTALLATION ARE YOUR RESPONSIBILITY. FOR ANY MATTERS YOU ARE HESITANT AND DO NOT UNDERSTAND, PLEASE GET IN TOUCH WITH YOUR NEAREST AUTHORIZED SERVICE BY PHONE. WE HOPE THAT YOU GET THE BEST EFFICIENCY FROM OUR PRODUCT. ON-SITE SERVICE IS SUBJECT TO A FEE FOR THIS PRODUCT.

3. DESCRIPTION & PURPOSE OF THE PRODUCT

THE DEVICE IS MADE TO COOK PANCAKES ON COOKING SURFACES IN THE KITCHENS OF INDUSTRIAL FACILITIES (SUCH AS BUSINESSES SERVING MASS MEALS, RESTAURANTS, TOURIST FACILITIES, AND KIOSKS).

SKU/MODEL	PRODUCT DIMENSIONS	NET WEIGHT	POWER
GPS003	40 X 40 X 14	9.5	2,5 KW, 13 AMP
GPS004	41 X 41 X 18	10	2,5 KW, 13 AMP
GPDO02	81 X 41 X 18	19	2,5 KW, 13 AMP

4. SAFETY DETAILS

-  THE DEVICE WORKS WITH 220-230 VOLTS ~ 50-60 HZ.
-  IF THE POWER CORD IS DAMAGED, MAKE SURE TO TAKE IT TO THE SERVICE.
-  IT MUST BE CLOSED BEFORE CONNECTING THE DEVICE TO ELECTRICITY.
-  ALL KINDS OF SOLID-LIQUID MATERIALS (CLOTHING, ALCOHOL AND DERIVATIVES, PETROCHEMICAL PRODUCTS, WOOD AND PLASTIC MATERIALS, CURTAINS, ETC.) THAT MAY BURN WHERE THE DEVICE OPERATES SHOULD NEVER BE KEPT.
-  DO NOT CLEAN WITH PRESSURIZED AND RUNNING WATER.
-  YOU CAN USE OUR DEVICES WITH OUR OTHER PRODUCTS IN THE SAME SERIES. IT SHOULD BE AT LEAST 30 CM BETWEEN IT AND OTHER DEVICES.
-  THIS DEVICE MUST BE INSTALLED BY APPLICABLE REGULATIONS AND SHOULD ONLY BE USED IN A WELL-VENTILATED PLACE. REFER TO THE INSTRUCTIONS BEFORE INSTALLATION AND USE OF THE DEVICE.

- i** THE DEVICE IS MADE FOR INDUSTRIAL USE AND SHOULD ONLY BE USED BY TRAINED PERSONNEL.
- i** THE DEVICE MUST NOT BE INTERFERED WITH OUTSIDE THE MANUFACTURER OR AUTHORIZED SERVICE.
- i** USE A FIRE EXTINGUISHER BY TURNING OFF THE GAS VALVES AND ELECTRICAL SWITCHES WITHOUT PANICKING (IF ANY) IN CASE OF A FIRE FLARE FOR ANY REASON IN THE AREA WHERE THE APPLIANCE IS USED. NEVER USE WATER TO EXTINGUISH THE FLAME.
- i** IT MUST BE USED WITH A SOILED OUTLET. CHECK THAT THE SOCKET IS GROUNDED.
- i** PEOPLE WHO WILL USE THE DEVICE SHOULD BE TAUGHT A USER MANUAL.
- i** USE OUT OF THE REACH OF CHILDREN.
- i** DO NOT USE THE DEVICE FOR ANY PURPOSE OTHER THAN THE SPECIFIED PURPOSE.
- i** DO NOT INSERT ANY OBJECTS INTO THE AIR-BREATHING HOLES OF THE DEVICE.
- i** THE FLOOR WHERE THE DEVICE IS USED MUST BE OF NON-COMFY MATERIAL.
- i** DO NOT OPERATE NEXT TO HOT APPLIANCES.
- i** THE DEVICE NEEDS TO TAKE THE AIR.
- i** DO NOT OPERATE IN DIRECT SUNLIGHT.
- i** USE HEAT-RESISTANT GLOVES TO PROTECT AGAINST HOT SURFACES.

5. USING THE DEVICE

5.1. FIRST USE

- REMOVE THE APPLIANCE FROM THE PACKAGE AND CHECK FOR DAMAGE DURING TRANSPORT. DO NOT OPERATE THE PRODUCT IF THERE IS DAMAGE.
- REMOVE THE PROTECTION NYLONS ON THE PANELS.
- CAREFULLY CLEAN THE PARTS OF THE DEVICE THAT ENCOUNTER THE FOOD.
- SMOKE MAY COME OUT OF THE APPLIANCE ON THE FIRST USE. THIS SMOKE COMES FROM INSULATION MATERIAL, WHICH IS NORMAL.

5.2. USAGE

- CONNECT THE APPLIANCE TO THE POWER.
- IF YOUR DEVICE HAS AN ON/OFF SWITCH, TURN IT ON. (AVAILABLE ON SOME MODELS)
- SET THE THERMOSTAT TO 250 DEGREES. ACCORDING TO THE WARM-UP MODEL, IT TAKES UP TO 30 MINUTES. ·WHEN THE DEVICE REACHES THE COOKING TEMPERATURE, THE THERMOSTAT LIGHT GOES OUT, AND YOU CAN COOK.
- IF THE TEMPERATURE IS LOW, THE THERMOSTAT SETTING IS BROUGHT TO THE TOP POSITION.
- AFTER COOKING IS FINISHED, THE TEMPERATURE IS BROUGHT TO 150 DEGREES TO SAVE MONEY.
- WHEN THE DEVICE'S USE ENDS, THE DEVICE'S HEAT THERMOSTAT MUST BE TURNED OFF.
- THE ON/OFF SWITCH SHOULD BE TURNED OFF AND DISCONNECTED FROM THE ELECTRICITY.
- COOKING SURFACES SHOULD BE THOROUGHLY CLEANED AFTER THEY HAVEFINISHED USING. OTHERWISE, DIRTY LAYERS WILL FORM, AND THERE WILL BE PROBLEMS WITH PERFORMANCE AND HYGIENE.
- DISCONNECT THE POWER WHEN YOU ARE NOT IN USE.
- THE DEVICE MUST BE OPERATED ON A COMPLETELY FLAT FLOOR.
- THE COOKING SURFACE IS TEFLON COATING. DO NOT DRAW WITH COMPLEX OBJECTS.
- AFTER THE DEVICE REACHES THE DESIRED TEMPERATURE, THE DOUGH BAKER IS POURED ONTO THE SURFACE AND SPREAD OUT WITH THE HELP OF AN APPARATUS, AND COOKING IS PROVIDED.

5.3. CLEANING

- ALWAYS DISCONNECT FROM THE ELECTRICITY BEFORE CLEANING.
- AFTER EACH USE, THE COOKING SURFACES MUST BE THOROUGHLY CLEANED.
- DO NOT POUR WATER INTO IT. CLEAN THE MAIN BODY WITH A DAMP CLOTH.
- DO NOT WASH THE MAIN BODY UNDER RUNNING WATER.
- THE LUBRICANT OF THE DEVICE SHOULD BE CLEANED.
- IF THE DEVICE IS NOT USED FOR A LONG TIME, IT SHOULD BE THOROUGHLY CLEANED AND PACKAGED.

5.4. TRANSPORT AND REPLACEMENT

- THE ELECTRICAL CONNECTION MUST BE DISCONNECTED BEFORE TRANSPORT.
- THE DEVICE CAN BE CARRIED BY HAND BY THE WORKFORCE.
- DO NOT HIT OR DROP THE PRODUCT WHILE CARRYING IT.

5.5. INSTALLATION OF THE DEVICE

- THE FEET OF THE UNDER-SET MACHINE WHERE THE DEVICE WILL BE PLACED MUST BE ADJUSTED, AND THE DEVICE MUST OPERATE ON THE BALANCE PLANE.
- THE ELECTRICAL CONNECTION OF THE DEVICE MUST BE CONTROLLED BY A QUALIFIED ELECTRICIAN, MAX FROM THE GROUND. IT MUST BE CONNECTED TO THE FUSE AT THE HEIGHT OF 170 CM.
- THE ELECTRICAL CONNECTION SHOULD BE MADE BY PLACING 30 MA LEAKAGE CURRENT INSURANCE IN THE SUPPLY INSURANCE AGAINST THE DANGER OF LEAKAGE CURRENT.
- THE ELECTRICAL INSTALLATION OF THE DEVICE SHOULD BE CONNECTED TO THE GROUNDING BAR ON THE NEAREST PANEL AND GROUNDED.

5.6. EFFICIENCY USE (EFFICIENT USE OF ENERGY)

- TURN OFF YOUR DEVICE WHEN YOU ARE NOT IN USE.
- DO NOT FORGET TO CLEAN THE APPLIANCE.
- STRICTLY COMPLY WITH THE USE OF THE DEVICE.
- THE AMBIENT OPERATING TEMPERATURE OF THE DEVICE PROVIDES OPTIMAL EFFICIENCY AT 24 DEGREES.
- THE OPERATING TEMPERATURE RANGE IS -5 AND +40 DEGREES.

6. CLEANING AND MAINTENANCE

6.1. CLEANING

- CLEAN AND DRY THE COMPLETE EXTERIOR WITH SPONGES AND LIQUID CLEANING MATERIAL BEFORE AND AFTER THE DEVICE IS FIRST USED AND AFTER EACH SUBSEQUENT USE (WITHOUT POWER TO THE APPLIANCE).
- DO NOT USE SALT SPIRIT, CIF, AND SIMILAR CHEMICAL CLEANING MATERIALS DURING CLEANING.
- 6.2.MAINTENANCE:
 - THE DEVICE MUST BE DISCONNECTED FROM THE POWER BEFORE ANY MAINTENANCE.
 - WORN PARTS MUST BE REPLACED WITH THE ORIGINAL.
 - PERIODIC MAINTENANCE CAN BE CARRIED OUT BY THE USER.
 - WE RECOMMEND MAINTENANCE EVERY 2 MONTHS, DEPENDING ON THE FREQUENCY OF USE OF THE DEVICE.
 - ALTHOUGH WITHIN THE WARRANTY PERIOD, MAINTENANCE OF THE DEVICE BY OUR AUTHORIZED SERVICE PERSONNEL IS SUBJECT TO A FEE.
 - DISCONNECT THE APPLIANCE FROM THE POWER DURING PERIODIC MAINTENANCE

6.2. LIFE OF DEVICE

THE DEVICE'S LIFESPAN IS 10 YEARS IF USED UNDER RECOMMENDED CONDITIONS OF USE.

6.3. FAILURES AND FAILURES THAT MAY OCCUR

THE LIFE OF THE DEVICE IS 10 YEARS IF USED UNDER THE RECOMMENDED USAGE CONDITIONS.


6.4. DEFECTS THAT MAY OCCUR AND FAULT DETECTION

- THE DEVICE IS CONNECTED TO THE SOCKET, BUT THE PRODUCT DOES NOT WORK.
- CHECK THE MAIN POWER SWITCH.
- CHECK THE STATUS OF THE CABLE OF THE DEVICE.
- CHECK THE ON-OFF BUTTON AND THERMOSTAT.
- IF THE PROBLEM PERSISTS, TAKE IT TO THE SERVICE PROVIDER.

6.5. SERVICE AND SPARE PARTS STATION

UNIT 7 JADE BUSINESS PARK, SPRING ROAD, MURTON, COUNTY DURHAM SR7 9DR. T: 0333 358 3678. E: SALES@ECATERING.CO.UK

7. LABELS

RG Distributors Ltd t/a ECATERING Unit 7 Jade Business Park, Spring Road, Murton, County Durham, SR7 9DR Telephone: (+44) 333 358 3678 Email: sales@ecatering.co.uk Website: www.ecatering.co.uk		
Product Name		
Model/Type		
Power/Watt		
Production Date		
Country of Production		
Category		
Voltage		
CAUTION!.. This device should be installed in accordance with current regulations and should only be used in well-ventilated areas. Instructions must be followed before and after use.		

- BE CAREFUL OF ELECTRICAL CABLES!
- PILLING WATER TO THE ELECTRICAL INSTALLATION!
- MUST USE WITH EARTHED SOCKET!
- 22-230 VOLT AC 50-60 HZ



WARNING! GROUNDLED ELECTRICITY CIRCUIT



HOT SURFACE

8. WARRANTY CONDITIONS

- THE WARRANTY PERIOD BEGINS FROM THE DATE OF DELIVERY OF THE GOODS AND IS 2 YEARS.
- DOCUMENTS WITHOUT SALES DATE, FACTORY, AND VENDOR COMPANY APPROVAL ARE INVALID. TO BENEFIT FROM THE WARRANTY, THE WARRANTY DOCUMENT MUST BE SHOWN.
- ALL PARTS OF THE GOODS, INCLUDING ALL PARTS, ARE COVERED BY OUR COMPANY'S WARRANTY.
- IF THE GOODS FAIL WITHIN THE WARRANTY PERIOD, THE TIME SPENT IN REPAIR IS ADDED TO THE WARRANTY PERIOD. THE REPAIR TIME OF THE GOODS IS NO MORE THAN 20 WORKING DAYS. THIS PERIOD BEGINS FROM THE DATE OF NOTIFICATION TO THE SERVICE STATION OF THE DEFECT IN THE GOODS, IN THE ABSENCE OF A SERVICE STATION, TO THE SELLER, DEALER, AGENT, REPRESENTATIVE, IMPORTER, OR MANUFACTURER OF THE GOODS. IF THE FAILURE OF INDUSTRIAL GOODS IS NOT FIXED WITHIN 10 WORKING DAYS, THE MANUFACTURER OR IMPORTER; IS OBLIGED TO ALLOCATE AN INDUSTRIAL GOOD WITH SIMILAR CHARACTERISTICS TO THE USE OF THE CONSUMER UNTIL THE REPAIR OF THE GOODS IS COMPLETED.
- THE DEVICE IS THE FIRST OF ITS USE INSTALLATION, OPERATION, INSTALLATION, AND USE AS DESCRIBED IN THE MAINTENANCE MANUAL ARE GUARANTEED AGAINST DEFECTS THAT MAY ARISE FROM MATERIAL WORKMANSHIP DEFECTS.
- FAILURES ARISING FROM THE USE OF THE GOODS CONTRARY TO THE POINTS IN THE USER MANUAL ARE NOT COVERED BY THE WARRANTY.
- THE GUARANTEE IS GIVEN; ASSEMBLY, USE, MAINTENANCE MANUAL, AND IF THE WARRANTY CONDITIONS ARE COMPLIED WITH, IT BELONGS ONLY TO THE GUARANTEED DEVICE AND CANNOT CLAIM RIGHTS OR COMPENSATION UNDER ANY OTHER NAME.
- IF SCRAPING, DELETING OR ALTERING THE INFORMATION INDICATING THE DEVICE'S TYPE, MODEL, AND SERIAL NUMBERS IN THE WARRANTY DOCUMENT OR ON THE GUARANTEED DEVICE ARE MADE, THE WARRANTY WILL BE ELIMINATED.
- YOUR PROPERTY; FAILURE OF THESE FAILURES AT LEAST FOUR TIMES IN ONE YEAR OR SIX TIMES WITHIN THE WARRANTY PERIOD DETERMINED BY THE MANUFACTURER-MANUFACTURER AND IMPORTER, PROVIDED THAT THEY REMAIN WITHIN THE WARRANTY PERIOD FROM THE DATE OF DELIVERY TO THE CONSUMER, EXCEEDING THE MAXIMUM TIME REQUIRED FOR REPAIR,
- IF THE SERVICE STATION IS NOT AVAILABLE, IT WILL BE CHANGED FREE OF CHARGE IN CASE OF A DETERMINATION THAT IT IS NOT POSSIBLE TO REPAIR THE FAULT WITH A REPORT TO BE ISSUED BY THE SELLER, DEALER, AGENT, REPRESENTATIVE, OR IMPORTER, MANUFACTURER, RESPECTIVELY.
- DURING THE WARRANTY PERIOD, THE SERVICE PERSONNEL AUTHORIZED BY THE MANUFACTURER MUST INTERVENE IN THE FAILURES. INTERFERENCE BY UNAUTHORISED PERSONS LEAVES THE DEVICE OUT OF WARRANTY.
- THE AUTHORISED SERVICE SHOULD BE NOTIFIED IN CASE OF ANY MALFUNCTION DURING USE.
- IN PERIODIC MAINTENANCE REQUIRED BY THE MANUFACTURER OR IMPORTER, WHICH IS MANDATORY TO BE CARRIED OUT BY SERVICE STATIONS DURING THE WARRANTY PERIOD, THE CONSUMER CANNOT BE CHARGED LABOR FEES OR SIMILAR FEES IN RETURN FOR THE SERVICE PROVIDED.
- THE ELIMINATION OF DAMAGES AND FAILURES DURING THE LOADING, UNLOADING AND SHIPMENT PROCESS, WHICH IS NOT THE RESPONSIBILITY OF THE MANUFACTURER AND SELLER COMPANIES, IS TREATED WITHOUT WARRANTY. IN THE SAME WAY, IT IS NOT GUARANTEED TO ELIMINATE DAMAGE AND DEFECTS CAUSED BY EXTERNAL FACTORS DURING THE USE OF THE DEVICE.
- THE MINISTRY OF INDUSTRY AND TRADE, GENERAL DIRECTORATE OF CONSUMER AND COMPETITION PROTECTION, CAN BE APPLIED FOR PROBLEMS WITH THE WARRANTY DOCUMENT.
- ANY DISPUTE OR CLAIM ARISING OUT OF OR IN CONNECTION WITH IT (INCLUDING ANY NON-CONTRACTUAL DISPUTE OR CLAIM) SHALL BE GOVERNED BY AND CONSTRUED IN ACCORDANCE WITH ENGLISH LAW.

MATTERS NOT COVERED BY WARRANTY:

- CLEANING OR BOILING OUR PRODUCTS WITH SALTWATER, BLEACH, OR ACIDIC SUBSTANCES.
- SCRATCHING OF PRODUCTS WITH COMPLEX SUBSTANCES.
- MISUSE OF PRODUCTS AND DISRUPTIONS CAUSED BY USER ERROR.
- DIRECT CONTACT OF PRODUCTS WITH FIRE.
- HAVING OUR PRODUCTS REPAIRED BY THE USER.
- FAILURES DUE TO NON-COMPLIANCE WITH THE PRODUCT INSTRUCTIONS FOR USE.

CONTENDER SINGLE ROUND ELECTRIC CREPE MAKER · SKU: GPS003

CONTENDER SINGLE ELECTRIC CREPE MAKER · SKU: GPS004

CONTENDER DOUBLE ELECTRIC CREPE MAKER · SKU: GP002



STEP UP TO THE PLATE